Manual

Note:When the compressor is shut off, it needs 3 minutes to restart.

Mode selection key:Select working mode.When in auto mode, the system will work like heat mode if the room temperature is below 21°C, or work like cool mode if room temperature is up than 27°C.

Fan selection key: Select fan speed. The fan speed will be low when in dry mode. In auto fan mode, the fan speed will be high if the difference of setting and room temperature big than 4°C, will be low if the difference less than 2°C.

Temperature setting keys:Be able to set from 16°C-30°C. It will not response in auto mode or dry mode.

Timer time setting keys:Select timer on, timer off or no timer.

Timer time setting keys:Select swing on or off.

Sleep key:Will shut off in 8 hours.

Too cool/Too warm keys: Only effective in auto mode.Be able to adjust the setting temperature 1°C up/down from 25°C when depressing once the key.

ON/OFF key:Control on or off.



- Display manual
- 1. Run light (red): Light is on when runs. 2. The light(yellow):Once set timer inline/offline or sleep,
- this light is on. Cancel it or reach the time, this light is out. 3. Comp light (green): This light is on, When compressor works.
- 4. IR: Receive the signal of infrared.
- 5. AUTO: When there is not remote, it can control on or off.

Fault examination

Fault	Indicator light
Room temperature sensor	Run (red) light flashes.
Indoor pipe temperature sensor	Time (yellow) light flashes

UNIVERSAL A/C

CONTROL SYSTEM

CONTROL SYSTEM

POWER TIME IR COMP AUTO KEY This product does not apply inverter A.C Pipe temperature sensor



UNIVERSAL A/C CONTROL SYSTEM







- High Quality
- Full Function Economic Model
- 5 Working Modes.
- 3 Fan Speeds.
- Accurate & Stable Temperature Control
- Accurate & Stable Auto Fan
- Timer on/off
- Sleep function Auto Defrost
- **Double Sensors**
- Prevent cold wind in heating mode
- Auto restart function
- Outdoor fan is controlled independently
- Deluxe receiver, nice appearance, work status visual display

Transformer connection with the fast plug socket, more convenience for installation



Please install by certified technician. Please test the system before installation. Please avoid strong light before IR receiver.

